

MMW-Forklift Mounted Dispenser *Assembly Instructions*



Figure 032

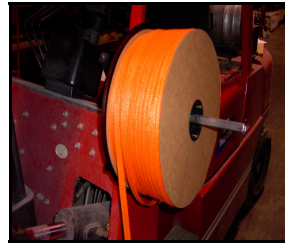


Figure 033

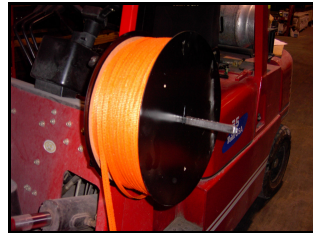


Figure 034

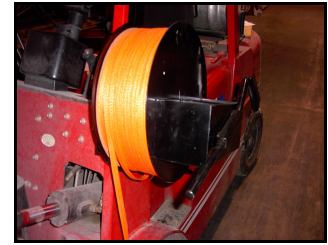


Figure 035

Instructions: Mount the main body (#1) to frame of forklift. Take caution to assure it does not obscure vision or create a safety hazard while getting on or off the fork truck. Securely fasten the main body using either a bolt or u-bolts (not provided). Because of the variety of fork trucks available, it is not practical to supply mounting hardware. The main body provides for numerous mounting applications. Use your judgment as to the best, most secure mounting method for your forklift.



Once the main body is securely attached to the lift truck. Slide the tension spring (#4) over the square tubing for the take up reels.

Then add one of the disks (#2) as shown in figure 032.

Add your coil of strap - figure 033 - then add the second disk - figure 034. Attach the buckle tray (#4) with the keeper pin (#5) - figure 035.

Fill the tray with buckles - add manual tool!

GET TO WORK!!

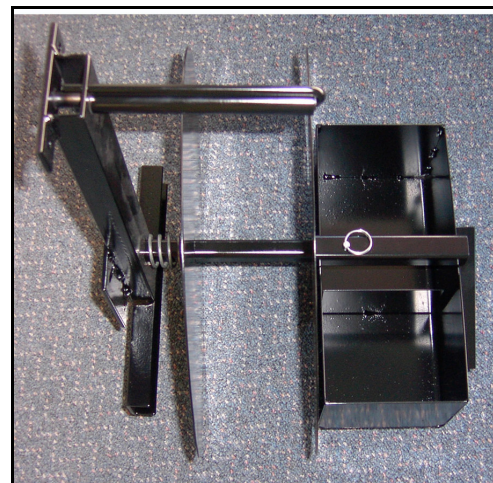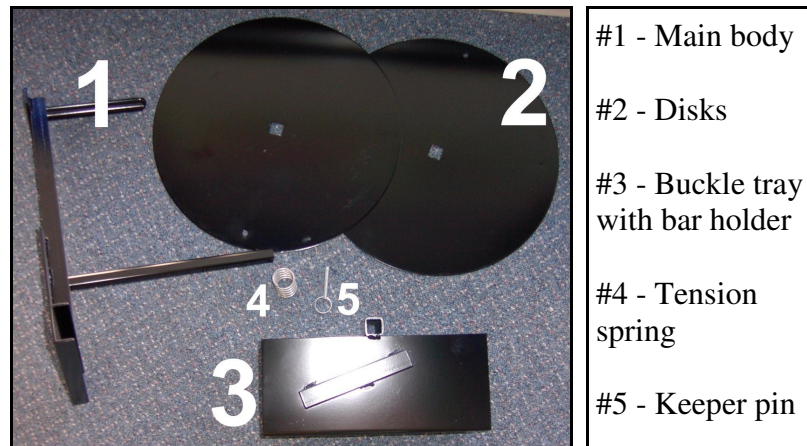

MAHLOCH MACHINE WORKS
Phone: 1-417-667-6650